



- (1) Unscrew 3 screws (3/8"-16) from center of ACF BASE.
- 2 Align 3 holes in DECK MOUNT to the ACF BASE. Then tighten securely all 3 screws (3/8"-16) with flat head screwdriver. Retighten periodically.

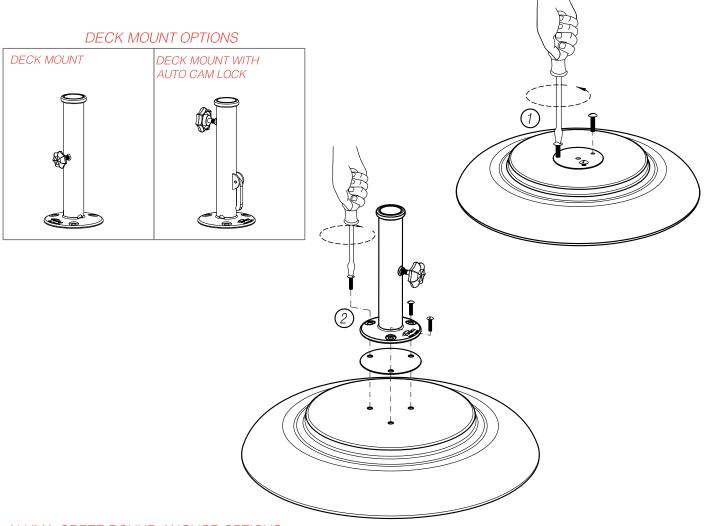

## ALUMA-CRETE ROUND ANCHOR OPTIONS

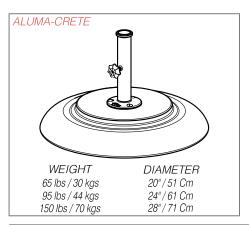

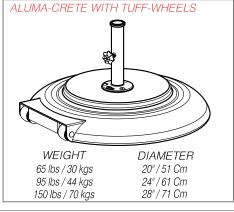

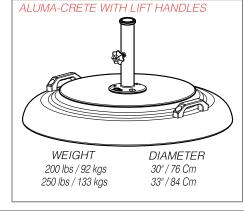

## global headquarters

